

## Sunshade fitting instructions

Pinnacle Rigid Sunshade & Neck Protector

ZPSNP01BL, ZPSNP01FL, ZPSNP05OR



Flame Retardant



Sun Smart



Weather Protection




UV Protection




Heat Protection

1.

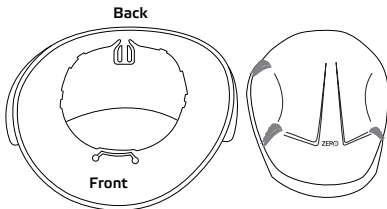


Take the ZERO Pinnacle Rigid Sunshade & Neck Protector out of the packaging. Make sure the Rigid Sunshade is in front, in alignment with the front of the Zero Pinnacle Helmet.

2.

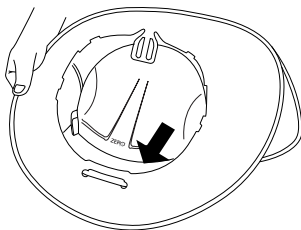


Place the centre hole of the ZERO Pinnacle Rigid Sunshade over the top of the Pinnacle Helmet. Slide the helmet brim in to the front clip of the sunshade, and make sure it is secure.

3.

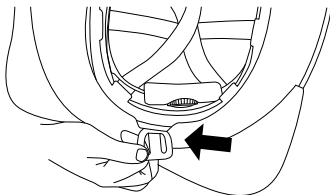

Keeping the Sunshade in place at the front, turn the helmet over, and pull the back of the Sunshade towards the back edge of the helmet. Insert the back tab of the Sunshade under the back of the Pinnacle Helmet by pulling the Sunshade back tab down and fitting onto the Helmet edge.

4.

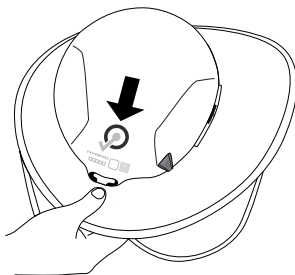

Make sure the Sunshade tabs are secure in the front and back of the Pinnacle Helmet. Do not force the Sunshade down, it should sit naturally with a stylish front-to-back curve shape.

### Fitting Cap-Attach Ear Protectors;

The Pinnacle Rigid Sunshade & Neck Protector has special slots to accommodate the arms of Earmuffs.

To Attach Earmuffs when the Sunshade is already on the Helmet: push the Arms of the Earmuffs up from beneath, through the slots provided in the Sunshade. Then clip the Earmuff brackets into the helmet.

To Fit Sunshade on Helmet when Cap-Attach Earmuffs are already in place; Simply fit the Sunshade as per the illustrated Instructions.

NOTE; Do not pivot the Earmuffs away, when a Sunshade is fitted. Simply click the Earmuffs away from the ears when not needed.

